Galaxy Auto Open + Slider flat heat press

User manual



General information

Size of heat platen and lower platen: 38x38 / 40x50

Size (machine/packed): 38x38 77x41x51cm / 83x47.5x59cm
40x50: 77x43x52cm / 84x52x59.5cm

Voltage: 230V

Power: 1800W

Timer setting: 0~999 seconds

Temperature setting: 80℃ - 258℃ (176℉ - 496℉)

Weight (machine/packed): 38x38: 38kg/45kg, 40x50: 45kg/50kg

How to use it?

1. Turn on the heat press using the main switch located on the back of the control panel.

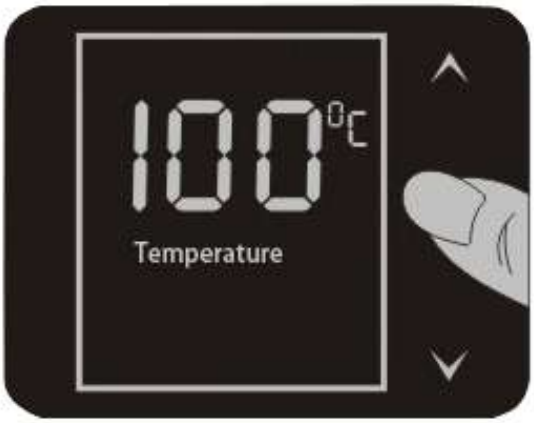
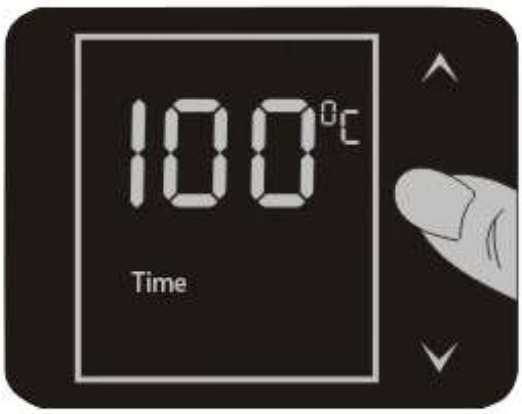


2. Adjust the required pressure using the green pressure adjustment knob located on the top surface of the heating plate.



Temperature and timer adjustment

1.Temperature adjustment 2.Timer adjustment

On the control panel, press the SET button once, then use the up/down button to adjust the temperature between 0~250C.	On the control panel, press the SET button a second time, then use the up/ down button to set the time between 0~999 seconds.
	

3. Press the SET button a third time, then the heat press will start heating up and the current temperature will be displayed on the display (indicates 70C degrees at startup).

4. Fix the printed transfer paper on the surface of the object to be printed, then place it on the press. It is recommended to pull out the lower tray and place the object to be printed. It is recommended to use baking paper (depending on the technology, especially for sublimation)!

5. When the heat press has heated up, close the lever and the countdown will start automatically.

6. The last seconds of heat treatment will be indicated by a beep, then the heat press will open automatically.

Emergency open button

If you need to open the heat press before the end of the cycle, press the Emergency button.



Safety regulations

- Only use the machine's own power cable, do not replace it with another type!
- Before use, make sure that the local power system can handle the machine's power consumption! If the system cannot handle the power of the machines used at the same time, it must be expanded by the power supplier!
- The upper surface of the heating surface also gets hot!
- The heating surface may still be hot 10-15 minutes after switching off!
- The machine may only be used by an adult after reading the instructions for use!
- In the event of a malfunction of the machine, do not open the machine's cover or touch the internal components, but call our service!
- After use, unplug the machine from the socket.

Cleaning, maintenance:

No maintenance required. In case of problems, contact our service.

Warranty: 10 years for the heating plate, 2 years for the machine,

1 year for the control panel.